

# debugout

WMPRO, WMMINI FW >= 1.0 WMMEGA FW >= 2.0

Enable or disable debug messages

## Description

**debugout ( int \$value )**

Sets the status of debug messages on the telnet console

## Parameters

**value**: 0 to disable, 1 to enable

## Return Value

None

## Example

```
<?
  max_execution_time(10);
  debugout(1);
  while (1); // this will do nothing for 10 seconds during which time all
  debug alerts will appear on the console
?>
```

## See Also

[debug\(\)](#) - Print to debug output

[error\\_reporting\(\)](#) - Set the debug output level

[log\(\)](#) - Print to the System Log

[print\(\)](#) - Output data to the current output stream such as a web page or terminal

[max\\_execution\\_time\(\)](#) - Set maximum execution time in seconds

From:  
<http://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**



Permanent link:  
<http://www.wattmon.com/dokuwiki/uphp/functions/debugout?rev=1489860840>

Last update: **2021/09/13 05:56**