

error_reporting

WMPRO, WMMINI FW >= 1.885 WMMEGA FW >= 2.0

Set the debug output level

Description

error_reporting (`int $verbosity`)

Set the verbosity level for debug output messages

Parameter

\$verbosity: 0=error, 1=warning, 2=notice

Return Values

None

See Also

[debug\(\)](#) - Print to debug output

[debugout\(\)](#) - Enable or disable debug messages

[log\(\)](#) - Print to the System Log (or optional file)

[print\(\)](#) - Print data to the current output stream such as a web page or terminal

From:
<https://wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:
https://wattmon.com/dokuwiki/uphp/functions/error_reporting

Last update: **2021/09/13 05:57**

