

freemem

WMPRO, WMMINI FW >= 1.0 WMMEGA FW >= 2.0

Return free memory space

Description

```
int freemem( )
```

Parameters

None

Return Value

The number of bytes available in RAM

Example

```
<pre><?
    $free=freemem();
    print($free." bytes free memory\r\n");
    if ($free<10000) print("Memory is getting low...");?
></pre>
```

See Also

[disk_free_space\(\)](#) - Return free space on microSD card

[disk_total_space\(\)](#) - Return total space on microSD card

[freestack\(\)](#) - Return free stack bytes

[mem_dump\(\)](#) - Write the current memory map to /dump.txt

[mem_usage\(\)](#) - Write memory usage to standard output

[nvram_free\(\)](#) - Return free NVRAM space

[Challenges to Programming the Wattmon: Memory Limits](#)

From:

<http://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**



Permanent link:

<http://www.wattmon.com/dokuwiki/uphp/functions/freemem?rev=1491462584>

Last update: **2021/09/13 05:56**