

# freestack

WMPRO, WMMINI FW >= 1.924 WMMEGA FW >= 2.0

Return free stack space

## Description

`int freestack ( )`

## Parameters

None

## Return Value

The number of bytes available in the stack

## Example

```
<?
  $free=freestack();
  print($free." bytes available in the stack");
?>
```

## See Also

[disk\\_free\\_space\(\)](#) - Return free space on microSD card

[freemem\(\)](#) - Return free memory space

[nvram\\_free\(\)](#) - Return free NVRAM space

From:

<http://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:

<http://www.wattmon.com/dokuwiki/uphp/functions/freestack?rev=1491468855>

Last update: **2021/09/13 05:56**

