

mqtt_disconnect

WMMEGA FW >= 2.1161

Disconnect the current MQTT connection

Description

mqtt_disconnect ()

This function disconnects the current MQTT connection, allowing you to resubscribe in case of a connection issue. For information on connection parameters see [MQTT Configuration](#)

Parameters

None

Return Values

None

Example

```
<?  
  mqtt_disconnect();  
?>
```

See Also

[mqtt_publish\(\)](#) - Publish a message to MQTT

[mqtt_subscribe\(\)](#) - Subscribe to MQTT messages

[mqttstat\(\)](#) - Get the MQTT connection status

[getusbstat\(\)](#) - Get USB host status information

From:

<https://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:

https://www.wattmon.com/dokuwiki/u.php/functions/mqtt_disconnect

Last update: **2024/03/11 03:08**

