

# nvram\_get

WMPRO, WMMINI FW >= 1.1015 WMMEGA FW >= 2.0

Get a value from NVRAM

## Description

**mixed** nvram\_get ( string \$key )

## Parameter

**\$key**: String variable name to get associated value for

## Return Values

**mixed**: value from NVRAM - depending on the value it will either return a string, and int or a float. This is automatically done based on the contents of the variable. The actual value in NVRAM is always stored as a string. If the value is not found it returns 0.

## Example

```
<?
$res=nvram_get("myvariable");
if ($res) {
    print("The NVRAM Variable myvariable contains: ".$res);
}
?>
```

## See Also

[nvram\\_set\(\)](#) - Set a value in NVRAM</html>

From:  
<http://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:  
[http://www.wattmon.com/dokuwiki/uphp/functions/nvram\\_get?rev=1494494403](http://www.wattmon.com/dokuwiki/uphp/functions/nvram_get?rev=1494494403)

Last update: **2021/09/13 05:56**

