

nvram_get

WMPRO, WMMINI FW >= 1.1015 WMMEGA FW >= 2.0

Get a value from NVRAM

Description

mixed nvram_get (**string** \$key)

Parameter

\$key: String variable name to get associated value for

Return Values

mixed: value from NVRAM - depending on the value it will either return a string, and int or a float. This is automatically done based on the contents of the variable. The actual value in NVRAM is always stored as a string. If the value is not found it returns 0.

Example

```
<?
$res=nvram_get("myvariable");
if ($res) {
    print("The NVRAM Variable myvariable contains: ".$res);
}
?>
```

See Also

[nvram_set\(\)](#) - Set a value in NVRAM</html>

From:

<http://www.wattmon.com/dokuwiki/> - Wattmon Documentation Wiki

Permanent link:

http://www.wattmon.com/dokuwiki/uphp/functions/nvram_get?rev=1494494403

Last update: **2021/09/13 05:56**

