

# ow\_reset

WMPRO, WMMINI FW  $\geq$  1.0 WMMEGA FW  $\geq$  2.0

Send a reset signal to the onewire bus. This is a low level function for custom onewire bus operations

## Description

ow\_reset ( )

## Parameter

none

## Return Value

none

## Example

```
<?  
    ow_reset();  
?>
```

## See Also

[ow\\_first\(\)](#) - Get the first device on the bus

[ow\\_next\(\)](#) - Get next device on bus

[ow\\_read\\_temp\(\)](#) - Read a temperature from a device

[ow\\_read\(\)](#) - Read a byte from the onewire bus

[ow\\_write\(\)](#) - Write to onewire bus

From:

<http://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:

[http://www.wattmon.com/dokuwiki/uphp/functions/ow\\_reset?rev=1494497383](http://www.wattmon.com/dokuwiki/uphp/functions/ow_reset?rev=1494497383)

Last update: **2021/09/13 05:56**

