

spi_read

WMPRO, WMMINI FW >= 1.0 WMMEGA FW >= 2.0

Read a byte from the SPI bus

Description

```
int spi_read ( )
```

Parameter

None

Return Values

An **integer** byte value read from the SPI bus (0-255)

See Also

[spi_clearcs\(\)](#) - Clear the CS output of the SPI bus

[spi_setcs\(\)](#) - Set the CS output of the SPI bus

[spi_write\(\)](#) - Write a byte to the SPI bus

From:

<https://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:

https://www.wattmon.com/dokuwiki/uphp/functions/spi_read

Last update: **2021/09/13 05:57**

