

# uptime

WMPRO, WMMINI FW >= 1.0 WMMEGA FW >= 2.0

Return the uptime in milliseconds

## Description

`int` uptime ( )

## Parameters

None

## Return Values

**Integer**: System uptime in milliseconds

## See Also

[microtime\(\)](#) - Return the number of milliseconds since boot

[mktime\(\)](#) - Return the Linux Timestamp for a given date and time

[settime\(\)](#) - Set the system time from a Linux Timestamp, with optional calibration

[strftime\(\)](#) - Format a Linux Timestamp using a format **string**

[time\(\)](#) - Return the current system timestamp

[timefromfat\(\)](#) - Convert a FAT filetime to a Linux Timestamp

From:

<http://wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:

<http://wattmon.com/dokuwiki/uphp/functions/uptime>

Last update: **2021/09/13 05:57**

