

# Delta Grid Tie Inverter with Zero Feed In

*<html><span style="color:red">NOTE: This is for an older version of WattmonOS (2.x) - so please use EZConfig for later versions.</span></html>*

This explains how to configure your Delta inverter and Secure 445 Power Meter so that the net import/export for the building is maintained at a preset level whenever possible. This is done by reading the active power at the meter which should be connected just after your main electricity meter, and throttling the generation of your inverter whenever required.

## Manually

Follow these steps to configure your device manually.

1. Go to *Control Panel > Packages* and install the *Delta RPI* package.
2. Go to *Devices* and click *Add > Manually Add a Device*
3. Select the *Secure 445* (device id 4098) and click *Add*
4. Make sure the 4098 device is showing as active
5. Click *Action > Configure* for that device
6. Give the device a name such as *pwrmeter*
7. Select *Create New Role* for the 4 roles in the drop down
8. Click *Apply Changes*
9. Go to the *Control Panel > Roles* page
10. Note down the *pwrmeter\_activepower* role number (i.e. 60)
11. Go to the *File Manager* and navigate to the */config/* folder
12. Edit the *DeltaRPI.ini* file
13. add a line *power\_control=1*
14. add a line *powermeter\_role=60* (replace the 60 with the number you noted down)
15. add a line *power\_min=5* (if you want the minimum import to be 5 kW)
16. add a line *power\_max=10* (if you want the max import to be 10 kW)

Save your changes and reboot, your inverter power percentage will now be throttled.

Make sure you have the WattmonOS 2.17 update for this, it is not implemented in previous versions.

## Using a preconfigured file

In order to do this you will need to install the following configuration file [this is coming soon]. Just save this on your hard disk and follow these instructions:

1. Log into your [Wattmon](#) via your favorite browser
2. Go to *File Manager*
3. Click the *Upload files* button
4. Select the file you download (.tar)
5. Once the file is uploaded, you should see it in the root folder. Click the suitcase icon next to the file name

Last update:

2021/09/13 05:56 how\_tos:delta\_grid\_tie\_zero\_export [https://www.wattmon.com/dokuwiki/how\\_tos/delta\\_grid\\_tie\\_zero\\_export?rev=1564649105](https://www.wattmon.com/dokuwiki/how_tos/delta_grid_tie_zero_export?rev=1564649105)

---

6. Once the file is extracted, you can reboot for the changes to take effect

This will overwrite any of your existing settings, so make sure you back them up first!

From:

<https://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:

[https://www.wattmon.com/dokuwiki/how\\_tos/delta\\_grid\\_tie\\_zero\\_export?rev=1564649105](https://www.wattmon.com/dokuwiki/how_tos/delta_grid_tie_zero_export?rev=1564649105)

Last update: **2021/09/13 05:56**

