

# clear\_watchdog

WMPRO, WMMINI FW >= 1.1112 WMMEGA FW >= 2.1113

Clear the software watchdog timer

## Description

clear\_watchdog ( )

Clears the watchdog timer. This auto-increments in firmware and when it reaches the preset threshold the Wattmon will reboot. This is implemented to prevent issues if long running scripts block the system. The interval can be set using [init\\_watchdog](#).

## Parameters

None

## Return Values

None

## Examples

```
<?  
clear_watchdog(); // reset the counter  
?>
```

## Additional Information

Function [init\\_watchdog](#) can be called to set the value. Alternatively the value will be loaded at startup from the `watchdog_interval` key in the debug section of `uphp.ini`

## Also See

[init\\_watchdog\(\)](#) - Initialize watchdog timer

From:  
<https://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:  
[https://www.wattmon.com/dokuwiki/uphp/functions/clear\\_watchdog?rev=1533629091](https://www.wattmon.com/dokuwiki/uphp/functions/clear_watchdog?rev=1533629091)

Last update: **2021/09/13 05:56**

