

flash_status

FW >= 1295

The flash_status() function returns information about the onboard flash chip (if any)

Description

array flash_status ()

Parameter

None

Return Values

array: Return array contains the following elements:

Key	Value
state	Flash status
percent	Percentage completed
size	Size of flash chip
mounted	0=not mounted, 1 = mounted
booted	1 = booted from Flash

state	Description
0	Idle
1	Erasing (percent will contain the erased percentage)
2	Restoring (percent will contain the restored percentage)
3	Backing up (percent will contain the backed up percentage)
4	Error

Examples

```
<?
    $flash_status = flash_status();
    if ($flash_status['state']==1) {
        print("Erasing Flash - ".$flash_status['percent']."% completed");
    }
?>
```

From:

<http://wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:

http://wattmon.com/dokuwiki/uphp/functions/flash_status

Last update: **2024/07/16 04:07**

