

# init\_watchdog

WMPRO, WMMINI FW >= 1.1112 WMMEGA FW >= 2.1113

Initialize the software watchdog timer

## Description

`init_watchdog ( int $interval )`

Initializes the watchdog timer. This auto-increments in firmware once per second and when it reaches the preset threshold the [Wattmon](#) will reset and reboot. This is implemented to prevent issues if long running scripts block the system.

## Parameters

**\$interval:** Interval in seconds (threshold value)

Set this value to 0 to disable the watchdog reboot timer in software.

The default value (as set by the operating system) is 300 seconds (5 minutes).

In the default operating system, and depending upon the system load and memory usage, values below about 65 can cause occasional reboots, and a value of 60 or below is guaranteed to reboot the system constantly.

## Return Values

None

## Example

```
<?
  init_watchdog(600); // set the reset interval to 10 minutes
?>
```

## Additional Information

The watchdog timer count is reset to zero by [clear\\_watchdog](#), which must be called regularly to ensure the counter does not overflow, causing a reboot. By default, in WattmonOS 2.26 and above, [clear\\_watchdog](#) is called from cronmin.cgi once per minute, and the default threshold value is 300 seconds (5 minutes). Therefore, if cronmin.cgi does not complete at least once during 5 minutes the

system will reboot.

The **interval** value for the watchdog timer can be loaded at startup by adding the `watchdog_interval` key in the debug section of config/uphp.ini, example for 10 minutes:

```
[debug]
watchdog_interval=600
...
```

If a timeout occurs the following type of entry is placed in the System Log:

```
Wed Aug 08 02:27:33 2018: Error: Rebooting due to software watchdog timeout
```

This function must be used if you are writing a script that might run longer than 5 minutes, which could possibly keep cronmin.cgi from being able to run, depending on how many scripts can run at the same time. Or it might be needed if the default cronmin.cgi is not used.

## Also See

[clear\\_watchdog\(\)](#) - Clear the software watchdog timer

From:

<https://www.wattmon.com/dokuwiki/> - Wattmon Documentation Wiki



Permanent link:

[https://www.wattmon.com/dokuwiki/uphp/functions/init\\_watchdog](https://www.wattmon.com/dokuwiki/uphp/functions/init_watchdog)

Last update: **2021/09/13 05:57**