

mqtt_disconnect

WMMEGA FW >= 2.1161

Disconnect the current MQTT connection

Description

mqtt_disconnect ()

This function disconnects the current MQTT connection, allowing you to resubscribe in case of a connection issue.

Parameters

None

Return Values

None

Example

```
<?
  mqtt_disconnect();
?>
```

See Also

[mqtt_publish\(\)](#) - Publish a message to MQTT

[mqtt_subscribe\(\)](#) - Subscribe to MQTT messages

[mqttstat\(\)](#) - Get the MQTT connection status

[getusbstat\(\)](#) - Get USB host status information

From:
<https://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:
https://www.wattmon.com/dokuwiki/uphp/functions/mqtt_disconnect?rev=1631512652

Last update: **2021/09/13 05:57**

