

ow_write

WMPRO, WMMINI FW >= 1.0 WMMEGA FW >= 2.0

Write a byte to the Onewire bus. This is a low level function allowing custom onewire operations.

Description

ow_write (\$val)

Parameter

An **int** value containing the byte to send to the onewire bus

Return Values

none

Example

```
<pre><?
ow_write(10);
ow_write(11);
ow_write(0x55);
?>
```

See Also

[ow_first\(\)](#) - Get the first device on the bus

[ow_next\(\)](#) - Get next device on bus

[ow_read_temp\(\)](#) - Read a temperature from a device

[ow_reset\(\)](#) - Reset the onewire bus

[ow_read\(\)](#) - Read a byte from the onewire bus

From:

<https://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:

https://www.wattmon.com/dokuwiki/uphp/functions/ow_write?rev=1494497257

Last update: **2021/09/13 05:56**

