

ow_write

WMPRO >= 1.0 WMMEGA FW >= 2.0

Write a byte to the OneWire bus

Description

ow_write (int \$value)

This function will write a single byte to the OneWire bus. This is a low level function allowing custom OneWire operations.

Parameter

\$value: An **integer** value of the byte to send to the OneWire bus

Return Values

None

Example

```
<?  
ow_write(10);  
ow_write(11);  
ow_write(0x55);  
?>
```

See Also

[ow_first\(\)](#) - Initiate a OneWire bus scan and return the address of the first device found

[ow_next\(\)](#) - Return the address of the next OneWire device found (after an [ow_first\(\)](#))

[ow_read_temp\(\)](#) - Read a temperature from a device on the OneWire bus

[ow_reset\(\)](#) - Reset the OneWire bus

[ow_read\(\)](#) - Read a byte from the OneWire bus

From:

<https://www.wattmon.com/dokuwiki/> - **Wattmon Documentation Wiki**

Permanent link:

https://www.wattmon.com/dokuwiki/uphp/functions/ow_write?rev=1494545538

Last update: **2021/09/13 05:56**

