

# snmp\_trap\_send

WMMEGA,MINI3 >= 2.1175 WM-M2 >= 3.1175

Send an SNMP Trap message

## Description

```
int snmp_trap_send ( string $message )
```

Send a message via SNMP Trap to the configured trap server. This will be transmitted as an ASCII message.

## Parameter

**\$message**: A **string**

## Return Values

**int**: 0 if it failed, or 1 if it succeeded

## Example

```
<?
  $res = snmp_trap_send("Voltage exceeded threshold");
?>
```

## See Also

From:  
<https://www.wattmon.com/dokuwiki/> - Wattmon Documentation Wiki



Permanent link:  
[https://www.wattmon.com/dokuwiki/uphp/functions/snmp\\_trap\\_send?rev=1603710625](https://www.wattmon.com/dokuwiki/uphp/functions/snmp_trap_send?rev=1603710625)

Last update: **2021/09/13 05:56**