

# uptime

WMPRO, WMMINI FW >= 1.0 WMMEGA FW >= 2.0

Return uptime in milliseconds

## Description

**int** uptime ( )

## Parameters

None

## Return Value

**Integer:** System uptime in milliseconds

## See Also

[microtime\(\)](#) - Return number of milliseconds since boot

[mktime\(\)](#) - Return Linux timestamp for a given date and time

[settime\(\)](#) - Set the system time from a Linux timestamp, with optional calibration

[strftime\(\)](#) - Format a Linux timestamp using a format **string**

[time\(\)](#) - Return current system timestamp

[timefromfat\(\)](#) - Convert a FAT filetime to a Linux timestamp

From:

<https://www.wattmon.com/dokuwiki/> - Wattmon Documentation Wiki

Permanent link:

<https://www.wattmon.com/dokuwiki/uphp/functions/uptime?rev=1494325050>

Last update: **2021/09/13 05:56**

